



SAVIOUR FIRE BLANKET

Model No.: PFSAV-RFB

Saviour Fire Blanket

A fire blanket controls fires by stopping sparks from spreading and separating flammable materials. It is used in various settings like offices, supermarkets, industries, vehicles, and homes, especially in fire-prone areas such as kitchens, hotels, parks, and gas stations. Fire blankets prevent fire spread and minimize damage.



TECHNICAL SPECIFICATIONS

Size	1.0 m x 1.0 m/ 1.2m/1.5m/1.8m
Packaging	Comes in a protective pouch

KEY HIGHLIGHTS

1. Lightweight, smooth texture and high temperature resistance
2. Resistance to acids and alkaline substances
3. Heat insulation
4. Self-extinguishing capability

APPLICATIONS

1. Kitchens,
2. Hotels
3. Gas Station
4. Shipbuilding & Petrochemical Industry
5. Shopping malls
6. Supermarkets
7. Frame & Repair Work

CERTIFICATION


NABL tested as per: BS EN 1869:2019

15381:2021



FIRE BLANKET FOLDING INSTRUCTION:

1. Lay the blanket flat on the surface.
2. Fold the blanket over the handle from one side to the other.




3. From the folded edge, fold along the width of the container



4. Now fold in a zigzag pattern along the length of the container




5. Once folded, place the blanket inside a container

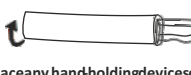

6. Place any hand-holding devices on the outside of the container



7. Ensure the container is properly locked and check the placement

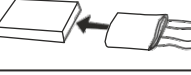


MONTHLY INSPECTION:

- a. Ensure the pull tape is securely in place.
- b. Check that the label is clean, undamaged, and properly positioned.
- c. Verify that the blanket is free from any contamination such as oil, grease, or insects.
- d. Confirm that the fire blanket is firmly mounted on the wall.

YEARLY INSPECTION:

- a. Conduct the monthly inspection as described above.
- b. Open the blanket and carefully examine it for any tears, damages, fraying, cracks, or contamination. Ensure the pull tape is intact.
- c. If the blanket is found to be unfit for use, discard it.
- c. Replace the fire blanket back in its location and provide folding instructions.

INSTALLATION INSTRUCTION

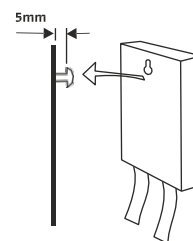

WARNING

- a. Install the fire blanket in a location that is easily accessible in case of a fire.
- b. Do not install the blanket near or at a fire hazard.
- c. Ensure that the mounting hook does not engage with the blanket after installation.


KITCHEN FIRES



1. Holding blanket by tapes, cover burning material completely by placing centrally over fire.
2. Switch off heat or gas.
3. Leave covered until cool.

HOUSE FIRE PROTECTION SHIELD.

CLOTHING FIRES

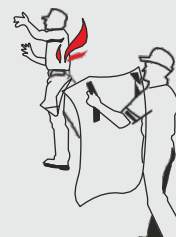

We specially design 1.8 meter fire blankets for clothing fires.

EMERGENCY RESPONSE & LIFE SAVING

EXPLORE MORE AT: WWW.SURESAFETY.COM

DISCLAIMER: Manufacturer will not be responsible for any mishandling and wrong usage of the product shown picture is just for representative purposes only, actual product may differ.