



Performing PPE



**NABL**

Tested for

EN 1486:2008-04

## SAVIOUR FIRE ENTRY SUIT (CLOSE PROXIMITY)

Model No.: BP-FS-JTL

[www.suresafety.com](http://www.suresafety.com)

**Sure**<sup>TM</sup>  
**Safety**  
Complete Safety Solutions

## Saviour Fire Entry Suit (Close Proximity)

The Saviour Fire Entry Suit is a specialized ensemble designed to provide firefighters with comprehensive protection in high-heat and fire-related emergency situations. Engineered with cutting-edge materials and advanced construction techniques, this suit offers firefighters the necessary defense against radiant heat, flames, and other hazards encountered during fire entry operations. Featuring heat-resistant fabrics, reinforced stitching, and ergonomic design, the Fire Entry Suit enables firefighters to perform their duties with confidence and agility, even in the most challenging environments. Trusted by firefighting professionals worldwide, this suit is an essential piece of protective equipment for ensuring the safety and effectiveness of firefighting operations.

### KEY FEATURES



- Aluminized outer layer reflects radiant heat, providing additional defense against extreme temperatures up to 3000°F.
- Reinforced with fiberglass and aramid layers for enhanced strength and durability.
- Double moisture barrier design prevents water penetration while allowing moisture vapor to escape, keeping the wearer dry and comfortable.
- Quilted insulation layers offer thermal insulation and padding for added comfort.
- Non-woven inner lining enhances breathability and comfort during extended wear.
- Flame-resistant (FR) fabric ensures resistance to ignition and prevents the spread of flames



EXPLORE MORE AT: [WWW.SURESAFETY.COM](http://WWW.SURESAFETY.COM)

DISCLAIMER: Manufacturer will not be responsible for any mishandling and wrong usage of the product shown picture is just for representative purposes only, actual product may differ.



## ACCESSORIES INCLUDE:



Hood with visor  
& Helmet cover



Insulated hand  
gloves



Heat Resistant  
Shoes



Bag



GI Case

## TECHNICAL SPECIFICATIONS

Full Body Coverage	Provides complete coverage from head to toe.
Closure System	The suit features a secure closure system, including a zipper with hook-and-loop fasteners and D-hooks, ensuring easy and efficient donning and doffing.
Hood	Provided with a gold visor for high heat protection.
Construction	Eight-layer construction for exceptional thermal protection.
Design	<ul style="list-style-type: none"><li>Designed to be worn with breathing apparatus and over work shoes.</li></ul>
Thread	<ul style="list-style-type: none"><li>Stitching with Aramid</li></ul>
Weight	<ul style="list-style-type: none"><li>Complete kit will be approximately 21 kgs</li></ul>
Packaging	Duffle bag and GI Case.

## CERTIFICATION


NABL tested for EN 1486:2008-04

## RECOMMENDED ACCESSORIES



Saviour Breathing  
Apparatus Set

## MATERIAL COMPOSITION

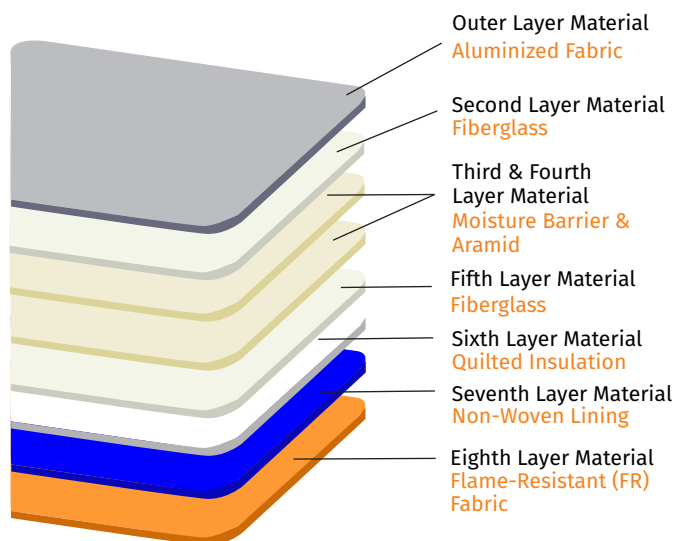

## CARE INSTRUCTIONS

- Follow manufacturer's instructions for cleaning and maintenance.
- Inspect regularly for signs of wear or damage and replace as needed.
- Store in a cool, dry place away from direct sunlight and chemicals.

## APPLICATIONS

- Firefighting and rescue operations in close proximity to extreme heat and flames.
- Industrial firefighting, including petrochemical, oil and gas, and manufacturing facilities.
- Emergency response teams, including fire departments, rescue squads, and specialized rescue units.

EXPLORE MORE AT: [WWW.SURESAFETY.COM](http://WWW.SURESAFETY.COM)

DISCLAIMER: Manufacturer will not be responsible for any mishandling and wrong usage of the product shown picture is just for representative purposes only, actual product may differ.